

Za tehnično podporo ali pomoč pokličite  
**090-6009**



## Unitech PA730 Quick Start Guide

Več informacij: <http://www.info-kod.si>

---

Vprašanja? Kontaktirajte naše strokovnjake



090-6009



servis@info-kod.si



<http://www.info-kod.si>

Ponedeljek – Petek od 9:00 do 15:00

**Rugged Handheld Computer**

- PA730 -



**Quick Start Guide**

401294G V1.0

-1-


**Package**

Please make sure the following contents are in the PA730 gift box. If something is missing or damaged, please contact your unitech representative.

**The basic package contents**

- PA730 Terminal
- Regulatory Compliance Statements
- USB Cable
- Power Adapter (EU or US )
- Battery
- Hand Strap
- Quick Start Guide


**Product View ( Front View )**

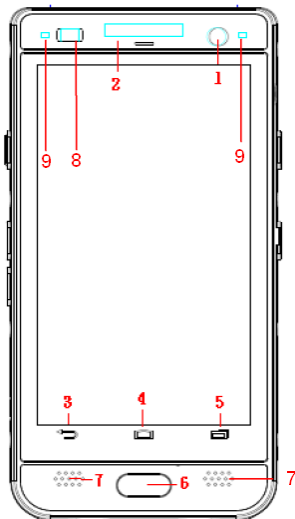

1.	Front Camera	6.	Camera Button
2.	Logo	7.	Speaker
3.	Back key	8.	Light Sensor
4.	Home Key	9.	LED
5.	Menu key		

-2-

**Product View ( Rear View )**

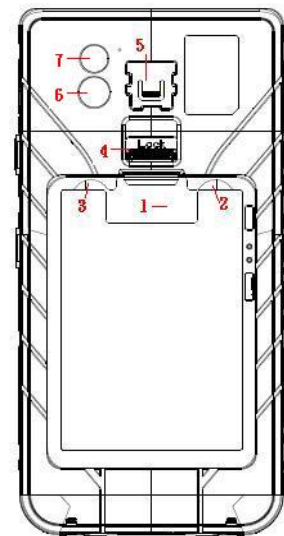

1	Battery Pin	5	Hand Strap hook
2	SIM Card Slot	6	Back Camera
3	Micro SD Card Slot	7	Flash LED
4	Battery Cover lock Switch		

-3-

**Product View ( Side View )**




1	Ear Phone Jack	5	Scan Button
2	Scan Button	6	Volume Up
3	Function Button	7	Volume Down
4	Power Button	8	USB Connect

-4-

**Product View (Top & Bottom View )**



1	Scan Window
---	-------------

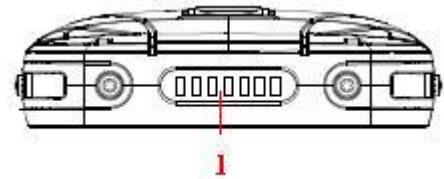

1	Cradle IO connect
---	-------------------


-5-

**Turning on the terminal for the first time**

PA730 is shipped with Lithium-ion battery but not fully charged. Please fully charge it before the 1st time use under the environmental temperature of 0°C ~40°C.

**Battery installation**

PA730 battery pack is not initially fully charged. After installing the battery pack, please charge it via the USB cable or the charging cradle. As default, the battery pack is disconnected at the factory to avoid damage caused by excessive draining. Avoid storing batteries for long period of time in fully charged or very low battery level status. Please remove the hand strap first when opening the battery compartment. Please push the battery Cover Lock Switch to open position then remove the battery cover.

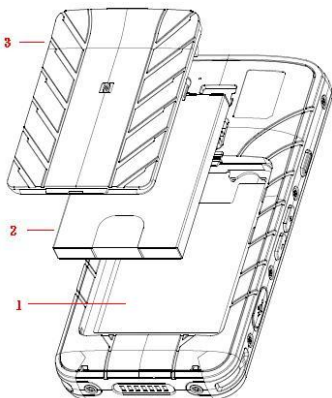

1	Battery Slot
2	Battery Pack
3	Battery Cover

-6-

**SD / SIM Card installation**

1. Turn off PA730 or put it in Battery Swap Mode
2. Remove the battery cover
3. Remove the battery pack by pulling the tab on the end of the battery
4. Lift the retaining door
5. Insert the micro SD card into the left slot
6. Insert the SIM card into the right slot
7. Insert the battery pack into the battery compartment.
8. Restore the battery cover and lock the battery cover lock switch

**Imager data capture to scan a barcode label**

1. Point the scan window at the barcode
2. Tap Scan on the screen or press one of the scan buttons on PA730. The imager will project a laser aiming pattern.
3. Center the barcode in any orientation within the aiming pattern. Ensure the entire barcode is within the rectangular area formed by the brackets in the aiming pattern, then either wait for the timeout or release the scan key to capture the image. A red light will illuminate the barcode to capture and decode it.

**CAUTION!** • To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.

• If the connector is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuited.

-7-