

Za tehnično podporo ali pomoč pokličite  
**090-6009**



## Unitech HT660e Quick Start Guide

Več informacij: <http://www.info-kod.si>

---

Vprašanja? Kontaktirajte naše strokovnjake



090-6009



servis@info-kod.si



<http://www.info-kod.si>

Ponedeljek – Petek od 9:00 do 15:00

# HT660e Rugged Handheld Terminal

- HT660e -



## Quick Reference Guide

---

400830G Version 1.0

## HT660e Product Introduction & Accessory Kit

---

	
HT660e Terminal	Manual CD
	
Communication Cable	Battery
	
Adaptor Kit	Hand Strap
	
Stylus Holder	

## HT660e Front View



## HT660e Rear View



## First Step with HT660e


Before first using the HT660e, please ensure the battery is fully charged. There are three ways to charge your HT660e:

- Docking Station
- USB/Charging cable
- Rechargeable Lithium-Ion battery pack

**NOTE:** Data loss may occur if the HT660e's backup battery is not adequately charged. Before charging the main battery, make sure the backup battery switch is ON.

## Switch On Backup Battery

Before installing a battery, locate the backup battery switch inside the battery compartment on the left-hand side. Please ensure that it is in the "ON" position before charging the main battery.

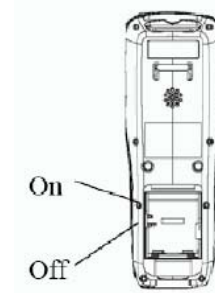

## Install the Battery Pack

1. Remove the battery cover.
2. Move the backup battery switch to the ON position (see the description above).

3. Insert the battery pack so that the contacts on the battery pack line up with the contacts in the battery compartment. Fully seat the battery.



4. Cover the battery.



## Supply Power to the HT660e

Connect the USB/Charging Cable to the HT660e and connect the AC adapter to the cable's power jack and an electrical outlet.

Or place the HT660e into the Docking Station (first connect the power supply to the Docking Station).

## Charge the Battery for the First Time

We would like to propose to charge the battery at least up to 12 hours for the first time to use. While it normally only takes about 4 hours to charge the battery after it's been drained, when charging the battery for the first time please allow at least 16 hours. While charging the main battery the backup battery should also be charged. Please make sure the backup battery has been switched "ON" (this cannot be emphasized enough).

**CAUTION:** There is a high risk of data loss from RAM if the backup battery is not fully charged. This can happen if the main battery has been drained and the unit is not connected to the AC adaptor. For this reason, it is crucial that the backup battery is switched on before charging the main battery for the first time.

## Keypad

Data can be entered via 36 keys keypad, which includes: 0~9, alpha, function, escape, backspace, enter, scanner trigger, cursor, and on/off keys.



**[ENT]** The "Enter" key confirms data entry.

**[FUNC]** The Function Key is used in conjunction with specific number keys to operate as Hotkeys (see next page).

**[Bksp]** The backspace key erases the character to the left of the cursor.

**[ESC]** The escape key returns the user to a previous page.

**[TAB]** The Tab key moves the cursor to the next tab or next control on a form.

**[Cursor]** The cursor key moves the cursor around the screen.